



Connecting to WebMaster/WIND/WebAlert via Direct Ethernet

Step 1: Change computer LAN settings: PC

For XP: Control Panel > Network and Internet Connections > Network Connections > Local Area Network

For Vista: Control Panel > Network and Sharing Center > Manage Network Connections

For Windows 7: Control Panel > View Network Status and Tasks

For Windows 8: On the desktop screen in the lower right of the taskbar there should be a network icon, either a monitor or wifi bars. Right click that and open network and sharing center.


Right-click on the LAN connection, and choose Properties.

For Windows XP: Highlight **Internet Protocol (TCP-IP)**

For Vista and Windows 7: Highlight **Internet Protocol Version 4 (TCP/IPv4)**

Select Use the following IP address

Change the IP address to one-off the controllers, ie if the controller is 10.0.100.29, make the computer's 10.0.100.30. Subnet mask should be 255.255.254.0.

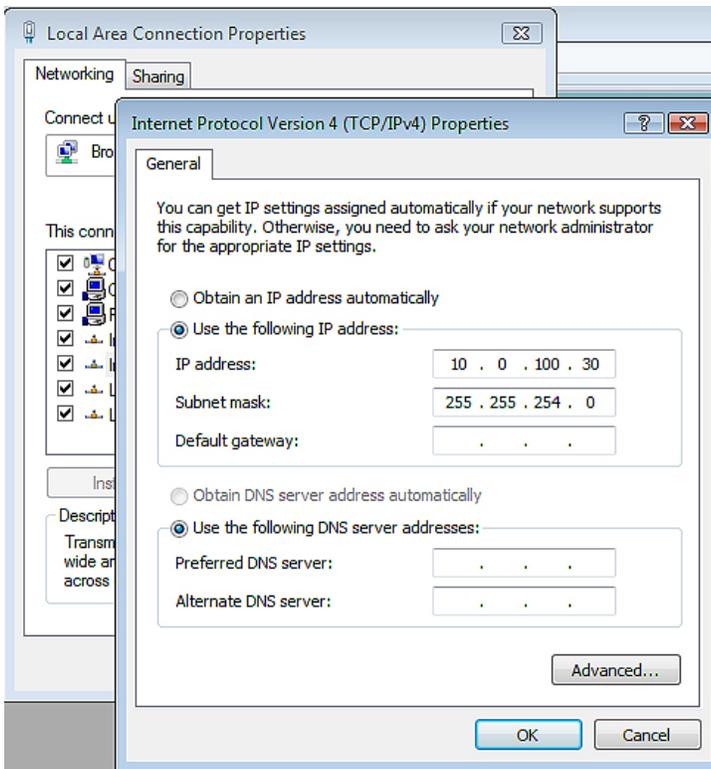

Note: Ethernet cross-over cable is needed for Windows XP!



Connecting to WebMaster via Direct Ethernet

Change computer LAN settings: Mac

For Mac OSX: System Preferences > Ethernet

Set **Configure IPv4** to Manually. Change the IP address to one-off the controllers, ie if the controller is 10.0.100.29, make the computer's 10.0.100.30. Subnet mask should be 255.255.254.0.

